


# DigiPyro® Triple Channel Quad Element Detector, PYQ 2898

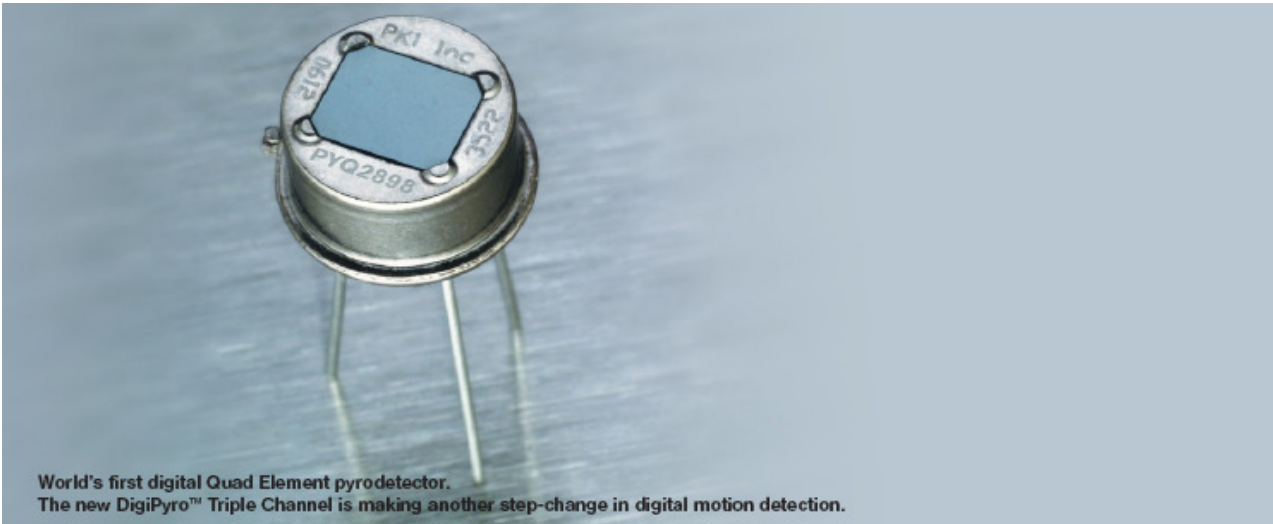

World's first digital Quad Element pyrodetector.  
The new DigiPyro™ Triple Channel is making another step-change in digital motion detection.

## Introduction

The Triple Channel, PYQ 2898, is the newest addition to the growing DigiPyro™ family of digital pyroelectric infrared detectors, brought to you by PerkinElmer.

The Triple Channel Quad Element detector is the high end version of the DigiPyro family, with two pairs of elements representing two channels and an additional temperature reference channel. It is a quad element configuration which is connected to a special integrated circuit.

It contains the analog-to-digital converter, a temperature sensor, the low-power oscillator and a serial interface, all in a standard three-pin TO-5 housing. It offers a 42 bit "direct link" interface. The move from analog to digital technology enables the DigiPyro to deliver a number of advantages including space savings from fewer components and significantly improved EMI immunity.

The PYQ 2898's fully digital, integrated processing technology continues the high quality standard tradition that customers have come to rely upon with the Dual Element PYD 1998 and all analog pyrodetectors PerkinElmer offers.


With the addition of the PYQ 2898 to the DigiPyro family, PerkinElmer is making another step-change in digital motion detection, for the first time enabling low-cost, quad element systems.

## Features and Benefits

- Digital output pyrodetector
  - 42 bit output "direct link", including temperature reference
  - Three pin TO-5 housing
- Low-cost, quad element configuration
  - Four elements 1.375 x 1 mm<sup>2</sup>
  - 0.8 / 0.25 mm spacing
- Infrared window
  - 5.5...14 μm transmission
  - Window size 5.2 x 4.2 mm<sup>2</sup>
- Outstanding electrical performance
  - Low EMI sensitivity
  - Unique responsivity
  - High power rejection rate
- RoHS compliant

## Applications


- Intrusion alarm applications
- Motion activated light switches
- Door openers

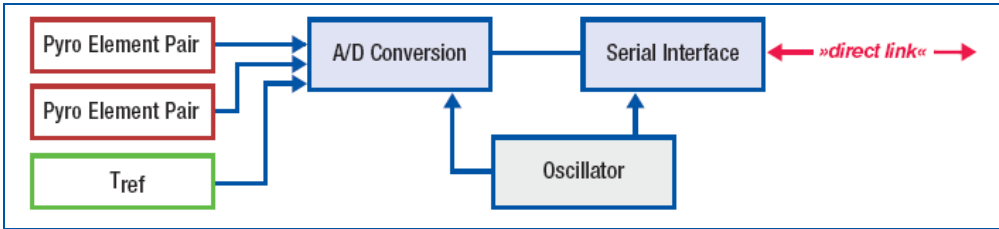

## DigiPyro Triple Channel Electrical Data

Parameter	Symbol	Min	Typ	Max	Unit	Remark
Operating voltage	V <sub>DD</sub>	2.7	3.3	3.6	V	
Supply current	I <sub>DD</sub>			15	µA (DC)	V <sub>DD</sub> = 4 V
Input low voltage	V <sub>IL</sub>				V	
Input high voltage	V <sub>IH</sub>	0.8 V <sub>DD</sub>			V	
Pull up / down current			100		µA	Input to V <sub>SS</sub> / V <sub>DD</sub>
Data setup time	t <sub>s</sub>	25			µs	
Data clock low time	t <sub>L</sub>	200			ns	
Data clock high time	t <sub>H</sub>	200			ns	
Data bit settling time	t <sub>bit</sub>	1			µs	C <sub>LOAD</sub> = 10 pF
Serial interface refresh time	t <sub>REP</sub>		14		ms	
ADC counts of bits			42		Bits	
ADC resolution each channel			14		Bits	Max. count = 214
ADC sensitivity		6.1	6.5	7	µV/count	
ADC offset		7000	8192	9200	Counts	
Internal clock frequency	f <sub>CLK</sub>		32		kHz	
<b>Temperature Reference</b>						
Gain			80		Counts/K	-20°C to +80°C
Linearity		-5		5	%	
<b>Elements</b>						
Responsivity		3.5	4.5		kV/W	
Match				10	%	
Noise			30	75	µVpp	
Operating temperature	T <sub>o</sub>	-40	20	85	°C	
Storage temperature	T <sub>s</sub>	-40		85	°C	Avoid storage in humid environments.

## Mechanical Dimensions

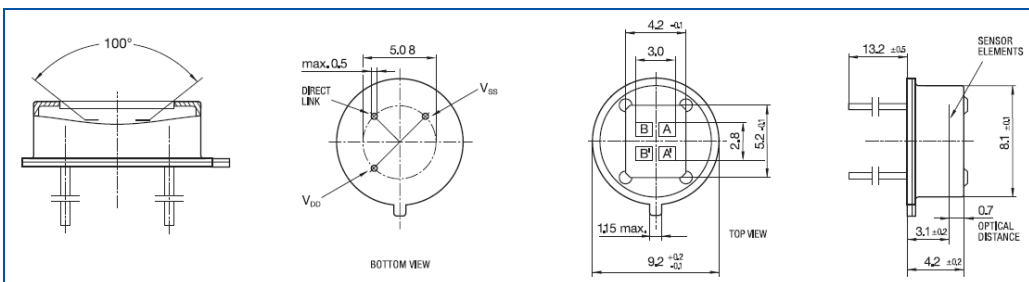

**North America Customer Support Hub**  
**PerkinElmer Optoelectronics**  
 22001 Dumberry Road  
 Vaudreuil-Dorion, Québec  
 Canada J7V 8P7  
 Telephone: +1 450-424-3300, (+1) 866-574-6786 (toll-free)  
 Fax: +1 450-424-3345  
 Email: [opto@perkinelmer.com](mailto:opto@perkinelmer.com)  
[www.optoelectronics.perkinelmer.com](http://www.optoelectronics.perkinelmer.com)

**European Headquarters**  
**PerkinElmer Optoelectronics**  
 Wenzel-Jaksch-Str. 31  
 65199 Wiesbaden, Germany  
 Telephone: (+49) 611-492-247  
 Fax: (+49) 611-492-170  
 Email: [opto.Europe@perkinelmer.com](mailto:opto.Europe@perkinelmer.com)

**Asia Headquarters**  
**PerkinElmer Optoelectronics**  
 47 Ayer Rajah Crescent #06-12  
 Singapore 139947  
 Telephone: (+65) 6775-2022  
 Fax: (+65) 6775-1008  
 Email: [opto.Asia@perkinelmer.com](mailto:opto.Asia@perkinelmer.com)



For a complete listing of our global offices, visit [www.optoelectronics.perkinelmer.com](http://www.optoelectronics.perkinelmer.com)  
 ©2008 PerkinElmer, Inc. All rights reserved. The PerkinElmer logo and design are registered trademarks of PerkinElmer, Inc. DigiPyro® is a trademark of PerkinElmer, Inc. or its subsidiaries, in the United States and other countries. All other trademarks not owned by PerkinElmer, Inc. or its subsidiaries that are depicted herein are the property of their respective owners. PerkinElmer reserves the right to change this document at any time without notice and disclaims liability for editorial, pictorial or typographical errors.  
 600197\_02 DTS0388